




LIFTBOY 1 & 2

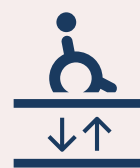

The vertical platform lift for lifting heights up to 830mm

Where ramps are too steep or too long – where stairlifts or elevators are needless due to too small a difference in altitude – the Liftboy is the optimal solution. With the help of our Liftboy models 1 and 2, wheelchair users and physically disabled persons can get over differences in altitude of up to 83 cm.

The Liftboy is designed for indoor and outdoor use! As the weatherproof lifting platform with a total weight of only 70 kg can easily be put up, it offers a perfect solution also for urgent or temporary needs. The lift can be equipped with special side entry or exit, upper access gate or transport wheels.

LIFTBOY 1&2

Simple Installation

The simple construction allows a fast installation with minimal structural works necessary on site.

Comfort

Optimal drive comfort is ensured by a stable and smooth lifting movement.

Reliable

Designed for outdoor or indoor installation, a strong motor in combination with robust electronics ensure a reliable and low-maintenance performance.



Simple installation for **temporary uses**

Outdoor unit for temporary or permanent installations



Handset on spiral cable for a comfortable control on the platform





Version for public buildings with **door for upper landing** and control pillar



Safety bar as an option for upper access protection

Main advantages of the Liftboy 1 and 2

- Silent, stable and smooth driving experience
- Simple to transport and fast to install
- Available in any RAL colour
- Available as outdoor version
- Optional with a door for the upper landing or with a safety bar on the platform
- Optional with transport wheels for mobile version
- Optional with extra long access ramp for easy access
- 90° entry-exit is possible

Optional mit **mechanischer Auffahr-rampe**, 90° Ausstieg und Spezialfarbe





Mechanical access ramp folds down when unit is lifting and creates a barrier against rolling off the platform



Plugable transport wheels allow a convenient transportation of the portable version of the Liftboy


Liftboy 1 & 2 - Technical Specification

Facts


Type	Liftboy 1	Liftboy 2
Lifting height	595 mm	830 mm
Loading capacity	180 kg	300 kg
Lifting speed	15 mm/s	15 mm/s
Minimum height of platform	100 mm	120 mm
Drive system	24V actuator with scissor mechanism	24V actuator with scissor mechanism
Internal dimensions	713 × 1170 mm	800 × 1495 mm
External dimension	810 × 1180 mm	924 × 1505 mm
Power supply	1 × 230V / 50–60Hz	1 × 230V / 50–60Hz

Construction examples


Standard
180° entry-exit

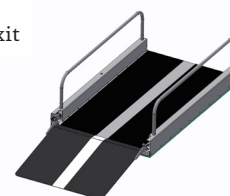

Side exit on
top level

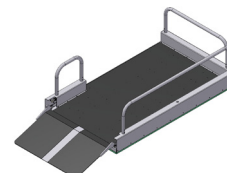

Side entry on
lower level

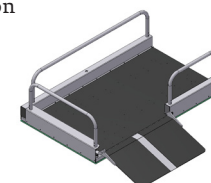

Together we provide accessibility!

For further information please contact:



Platform stairlifts



Chair stairlifts



Vertical platformlifts



Stairclimbers



Poollifts

Official
partner of:

LEHNER
LIFTTECHNIK